


# GraMag

## Work Instruction for Operation of Armrest Adjustment


Armrests can be mounted on both sides of the seat.



The handles are rotated inboard to adjust the front of the armrest down.

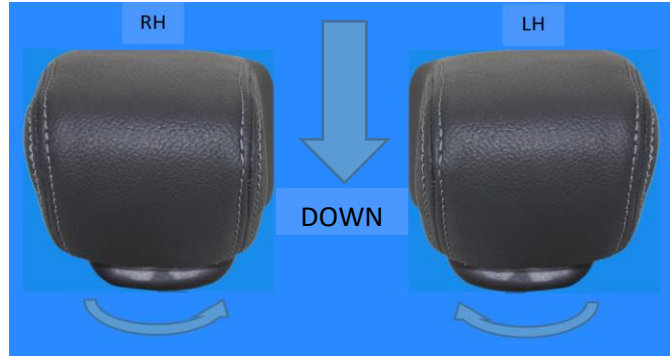

The handles are rotated outboard to adjust the front of the armrest up.

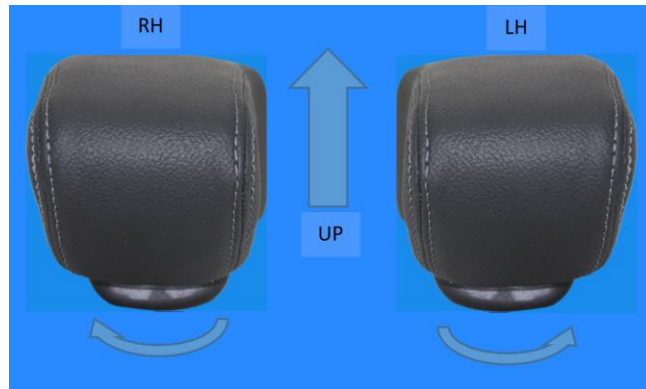

If too much force is applied at the end of travel when adjusting upward, it takes nearly as much force to move the handle in the downward direction. It is difficult for the fingers to push that hard, so it may take two hands to get the handle to move. Adding lubrication to the threads can help.



If too much force is applied at the lower end of travel, the E-clip can get pushed off the end. If adjustment continues, The nut may fall off the end. This can be reassembled.

Lubricate here

